

# KEY FOB REMOTE



## anti-theft

Turn on/off the anti-theft alarm. Anyone who picks up the tattletale will trigger a siren. RED indicates the anti-theft is active.



## hot buttons

Use this button to manage the four hot buttons on your system. RED indicates the hot button is armed.



## pet mode

When you arm the system with pets in the home you can select this mode to disable the indoor motion detectors.

## panic alarm

[Press both at the same time and hold for three seconds]

