



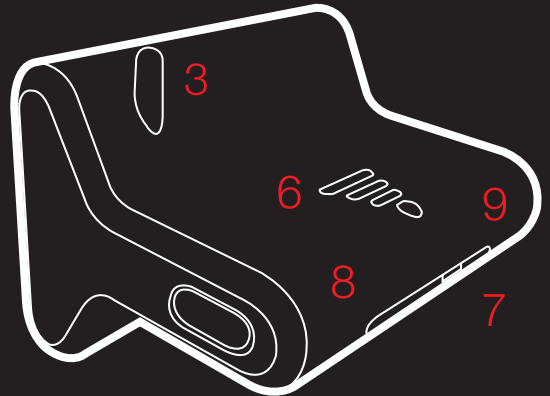

**QUICK
START
GUIDE**

BASE UNIT FEATURES

- 1. motion detector**
 - Point it at anything you want to protect. It senses motion to trigger the alarm.
 - 2. LCD touch screen**
 - Full color, touch activated LCD screen controls all alarm functions.
 - 3. cellular radio**
 - The alarm signal is sent out over the cellular network. There is no phone line to cut.
 - 4. dual speakers**
 - Projects alarms and sound effects.
 - 5. SD card slot**
 - Use it to load your digital jpg images.
 - 6. strobe light**
 - Flashes when there has been an alarm event. Also doubles as a night light.
 - 7. a/c power port**
 - Plug the AC adapter cord into the back of the base unit.
 - 8. back up battery**
 - Rechargeable battery powers the unit up to 20 hours if the power goes out.
 - 9. Rattlesnake™ technology**
 - EXCLUSIVE TATTLETALE FEATURE. Rattlesnake is an innovative tamper sensor. When the tattletale is armed, any attempt to destroy the base unit triggers an automatic alarm signal.
-

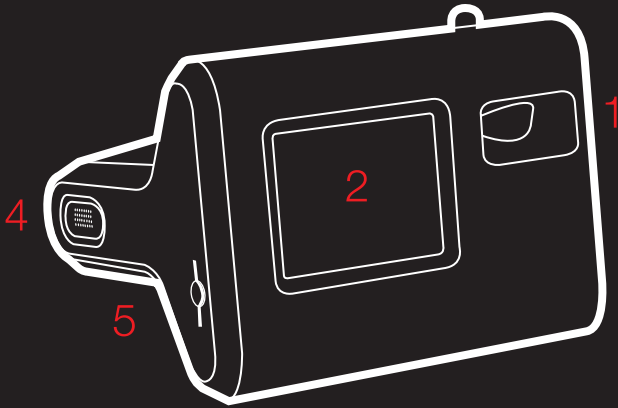

INVENTED AND MANUFACTURED IN THE USA

1] EASY SET UP STARTS HERE

PLUG IT IN

Point your tattletale at anything you want to protect or you can place in an area to intercept an intruder.

Find the power cord and plug it into the back of the tattletale base unit. Plug the AC adapter into outlet. The alarm system will automatically search for the nearest cell tower. The signal strength icon will indicate the quality of your cellular connection. If you do not have a cell signal call 1.888.TELLONU or go to tattletale.com for assistance.



Cell signal icon is located at the top left of the screen. Five bars indicates full power. Five RED bars indicate no cell service.

2] FOLLOW THE ON-SCREEN TUTORIAL

Just touch the screen anywhere to begin. You will be guided through the initial set-up process. You can return to the previous screen anytime by pressing 'back'.

- Create a PIN number
- Enter your mobile phone number
- Enter your Email address
- Learn in the key fob remote

24/7 MONITORING

OPTIONAL: If you would like to have a professional monitoring company dispatch the police, fire, or EMS personnel to your location go to tattletale.com to activate.

3]

INCREASE YOUR WIRELESS PROTECTION

ADD SENSORS

Your tattletale base unit and your key fob remote, together, are a complete alarm system. To extend your wireless protection you can add additional wireless sensors.

OPTIONAL: Press the “Settings” button on the home screen. Press the “Sensors” button. Follow the on-screen instructions.



**Motion
Detector**



**Door/Window
Sensor**



**Glass Break
Detector**



**Key Fob
Remote**



**Smoke
Detector**

4]

UNLEASH YOUR SECRET WEAPON **ARM & DISARM**

LEAVING HOME? Press “Away” on the home screen. The tattletale will arm itself after a 60-second delay. The built-in motion detector will arm as well as any additional sensor you may have. You may also press “Away” on the key fob remote.

STAYING HOME? Press “Home” on the home screen. The tattletale will arm itself instantly. Any perimeter sensors will arm. The built-in motion detector and any sensors designated interior will NOT arm. You may also press “Home” on the key fob remote.

TO DISARM SYSTEM: Press “Disarm” on the home screen and enter your 4-digit PIN OR press the “Unlock” button on the key fob remote.

GUIDE TO FEATURES



signal strength

Indicates the strength of the cell signal. RED bars indicate no cell service.



message

Indicates that a message is being sent (WHITE), successfully sent (GREEN), or message failure (RED).

12:00

time

This is the time of day at your location. It sets itself automatically.



motion detector

Indicates that the built-in motion detector is seeing movement.



battery charge

GREEN icon indicates external power is present and battery is charging. RED icon indicates that the unit is unplugged from AC power and the amount of battery power remaining.



trouble

Indicates whether a sensor has a low battery or is lost. Touch to view the sensors trouble condition.



settings

This takes you to the system settings screen. There you can manage your entire system.



fire

Press for 3 seconds to signal a fire emergency to your local fire department. Requires professional monitoring activation.



medical

Press for 3 seconds to signal a medical emergency. Requires professional monitoring activation.



police

Press for 3 seconds to signal a police emergency. Requires professional monitoring activation.



disarm

Manually enter you four digit PIN number to disarm the alarm system.



arm - away

Arms the system when you are leaving home.



arm - home

Arms the system when you are at home. All interior sensors are disabled.



quiet

Touch screen keypad presses, exit delay tone, and remote chirps will be silenced. BLUE indicates the quiet mode is activated.

GUIDE TO FEATURES

PIN #

PIN number

Set a new PIN number.



chime on/off

Toggle the chime sound on/off.



sensors

Manage all the sensors on your system. If the icon is AMBER that indicates that there is an open sensor or a sensor has been tampered with. Touch to bypass the open sensor or check tamper status.



alarm clock

Press to set the alarm clock. GREEN indicates the alarm clock is set.



users

Manage all the users on your system.



features

Go to a menu of the advanced system features.



back

Go back to the previous screen.

KEY FOB REMOTE



anti-theft

Turn on/off the anti-theft alarm. Anyone who picks up the tattletale will trigger a siren. RED indicates the anti-theft is active.



hot buttons

Use this button to manage the four hot buttons on your system. RED indicates the hot button is armed.

 


pet mode

When you arm the system with pets in the home you can select this mode to disable the indoor motion detectors.

panic alarm

[Press both at the same time and hold for three seconds]

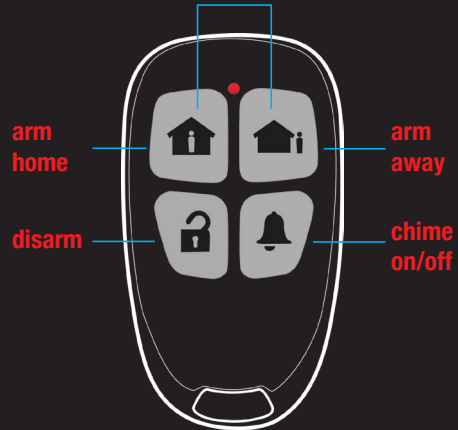



tattletale
portable alarm systems